

OPERATION MANUAL

ZP5088

**Exhausted batteries are to be removed from the toy.
Rechargeable batteries are only to be charged under
adult supervision.**


**Warning. Not to be used in traffic.
This toy has no backe.**

**The toy should be used with caution since skill is
required to avoid falls or collisions causing injury to
the user or third parties.**

**Batteries are to be inserted with the correct polarity.
Rechargeable batteries are only to be charged under
adult supervision.**

**Rechargeable batteries are to be removed from the
toy before being charged.**


**The instruction shall state that transformers or battery
charger used with the toy are to be regularly examined
for damage to the cord, plug, enclosure and other parts,
and in the event of such damage, they must not be used
until that damage had been repaired.**

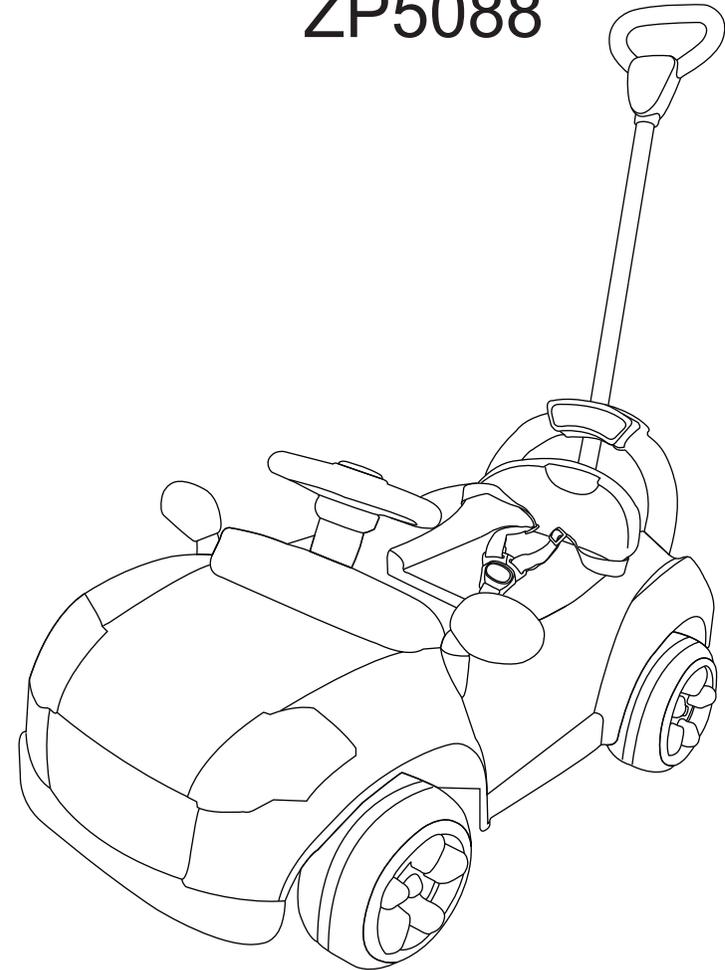

Warning. Protective equipment should be worn. Not to be used in traffic.

I . FEATURES AND FUNCTIONS

1. Please turn on the electric button before use it. turn off while you do not use it.
2. This car has the function of moving forward and back ward. stress forward is moving forward, stress backward is moving backward.
3. There is a button in the middle of the steer wheel, sounds would come out if you press this button.

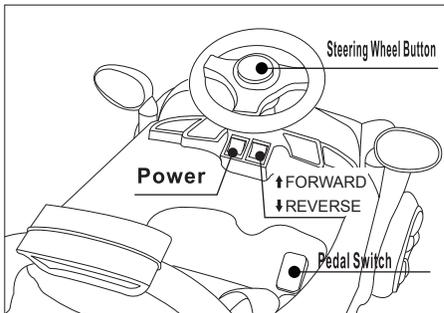

II . SPECIFICATION:

BATTERY: A sealed lead acid battery(6V 4.5AH).

AGE: 18-36 month.

SIZE: 80x50x38cm

LOADING LIMINATION: 20kg

SPEED: 2.5-3km/hr

POWER: Input 110-240V, 50-60HZ, Output 8V


DURATION OF THE BATTERY: Around one hour functioning with 8-12 hours charging.

III . ATTENTION :

1. Don't drive this car in the dangerous places such as in the streets,roads and slopes.
2. Don't ride on sandy or lumpy surfaces.
3. Don't change the forward/backward switch when the car is still driving. please change it when the car is stopped.
4. This car is limited for only one child. overload is prohibited.
5. Battery charging should be operated by adults, children are not allowed to charge the battery by themselves.
6. This production should be fixed by adults and please check it whether the car is fixed correctly. It is necessary to be supervised by adults, while child is on riding.
7. Please do not wash the car by water. clean the car with cloth is fine.
8. Please avoid short circuit.

IV. HOW TO USE






1. Please lift up seat connect the main wire to the battery wires before the first time you use it. Red to red, black to black(see below). It can't be fixed wrongly, or there will be malfunction or short circuit.
2. The charging socket placed in front of the seat with a symbol of charging.
3. Please charge it when it is slower than usual.
4. The continued charging time should be no more than 16 hours.
5. Please charge the battery fully before you stored it for a long time . And charge it every three month, this could help extend the lives of the battery.
6. The charger would be a little warm during the charging time, and the battery would also be a little wet.

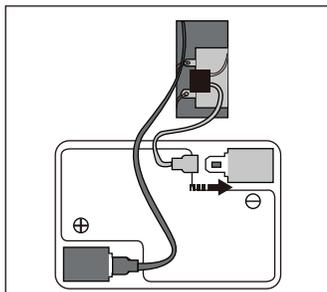


V. TROUBLESHOOTING GUIDE

Problem	Possible Solutions
The vehicle does not move	<ul style="list-style-type: none"> · Charge the battery. (Charge battery after each use.) NOTE: vehicle will be cut off electrically during charging. · Check all electrical connections. · Check that all switches are in the "on" position · Check that the foot switch or manual button is not stuck · The fuse may have been activated due to excessive weight or rough driving conditions. Wait at least 10~20 seconds, and the vehicle will reset itself. · Check is whether there is debris stuck wheels.
The vehicle begins to run slow	<ul style="list-style-type: none"> · Charge the battery. (Charge battery after each use.) · Only allow one rider at a time. · DO NOT exceed child weight limit: 20kg · Drive on level ground. · Battery may be old or not accepting a full charge. The battery will last from 18 months - 3 years depending on care, use and environment. Replace with 6Volt 4.5 Ah battery only. · Check is whether there is debris stuck wheels.
The vehicle runs erratically	<ul style="list-style-type: none"> · There may be a problem with the fuse, or you may have a damaged battery.
The charger feels warm when in use	<ul style="list-style-type: none"> · This is normal.
The gears sound very loud and/or are making a grinding noise.	<ul style="list-style-type: none"> · The gears may be broken.


VI. PARTS OF THE CARS:
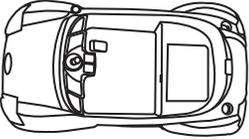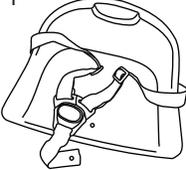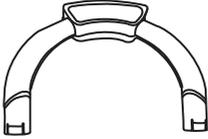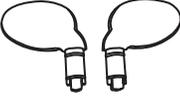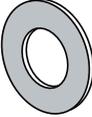
<p>Stroller body*1</p>  <p>①</p>	<p>Seat*1</p>  <p>②</p>	<p>Tail*1</p>  <p>③</p>
<p>Mirror*2</p>  <p>④</p>	<p>Wheel*3</p>  <p>⑤</p>	<p>Driving wheel*1</p>  <p>⑥</p>
<p>M8 Nut*4</p>  <p>⑦</p>	<p>Hubcap*4</p>  <p>⑧</p>	<p>Steering wheel*1</p>  <p>M5x35 Machine screw*1 5mm nut*1</p>   <p>⑨</p>
<p>10mm Washer*7</p>  <p>⑩</p>	<p>Handle*1</p>  <p>⑪</p>	<p>Insert*7</p>  <p>⑫</p>
<p>M3x16 Tapping Screw*1</p>  <p>⑬</p>	<p>M4x40 Machine Screw*1</p>  <p>M4 Nut*1</p>  <p>⑭</p>	<p>Charger*1</p>  <p>⑮</p>

VII. EXPLODED VIEW:

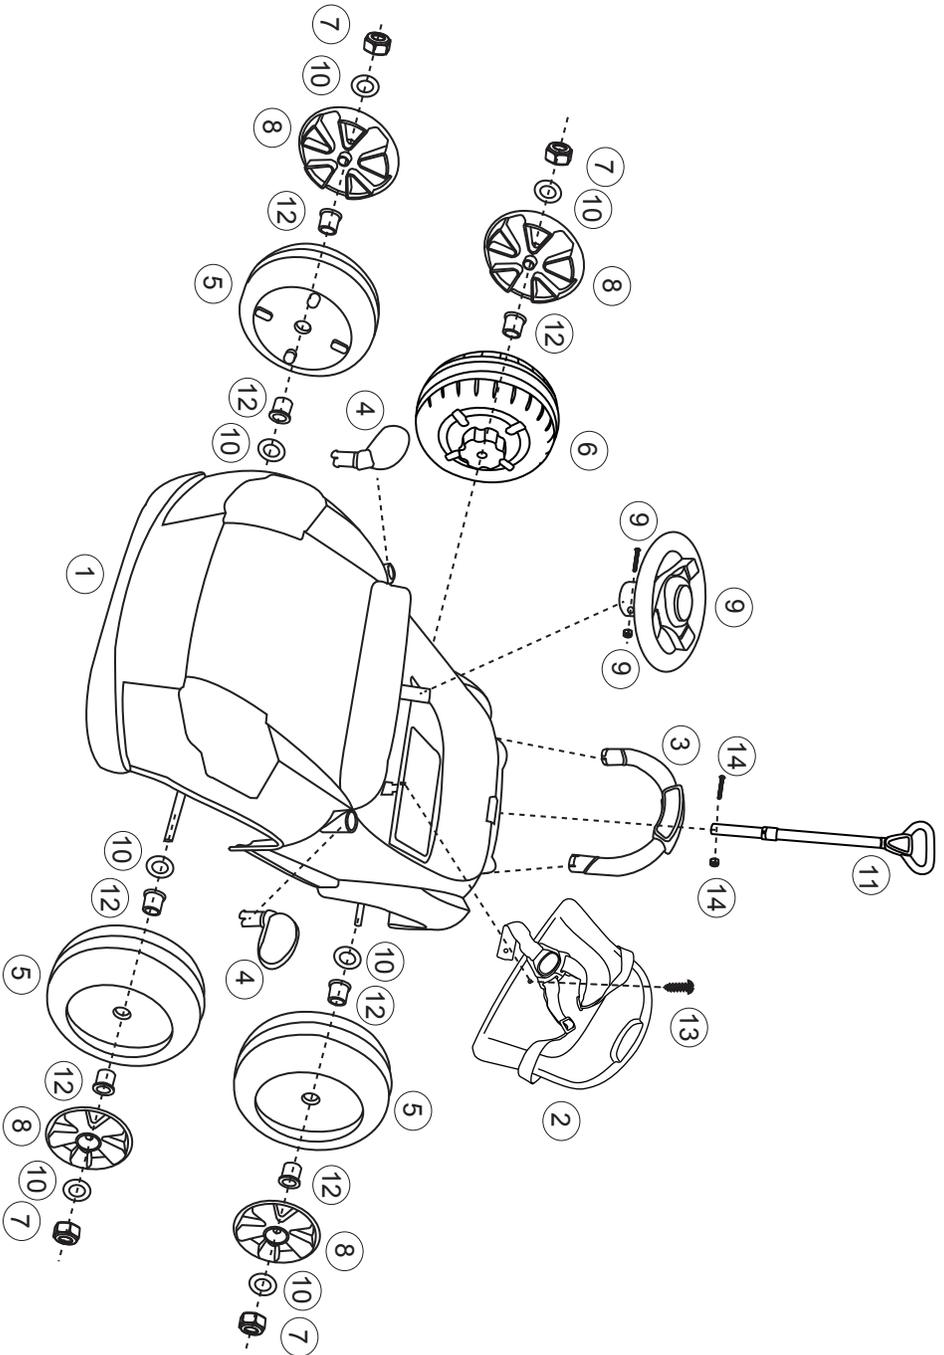


IX. HOW TO FIX:

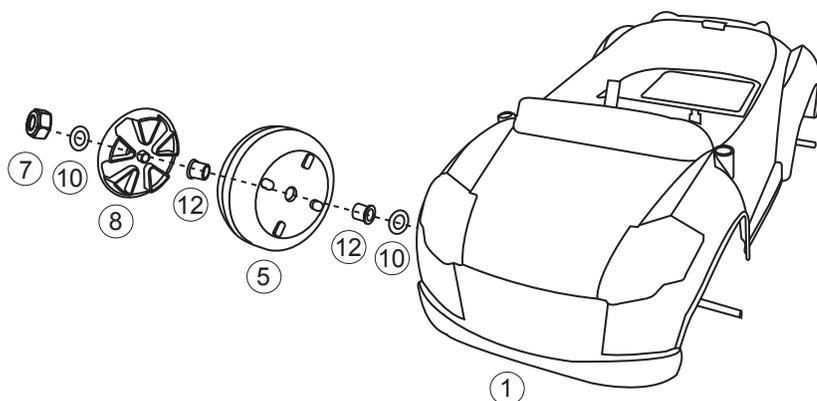


Step 1: Assembly left front wheel

1. Set the ⑩ 10MM gasket into the front axle;
2. Set the ⑫ inserts into the front axle in the direction as shown in the picture;
3. Set the ⑤ wheel into the front axle in the direction as shown in the picture;
4. Set the ⑫ inserts into the front axle in the direction as shown in the picture;
5. Set the ⑧ wheel hub into the front axle in the direction as shown in the picture;
6. Set the ⑩ 10MM gasket into the front axle;
7. Screw the ⑦ M8 lock nut to the front axle with a wrench.

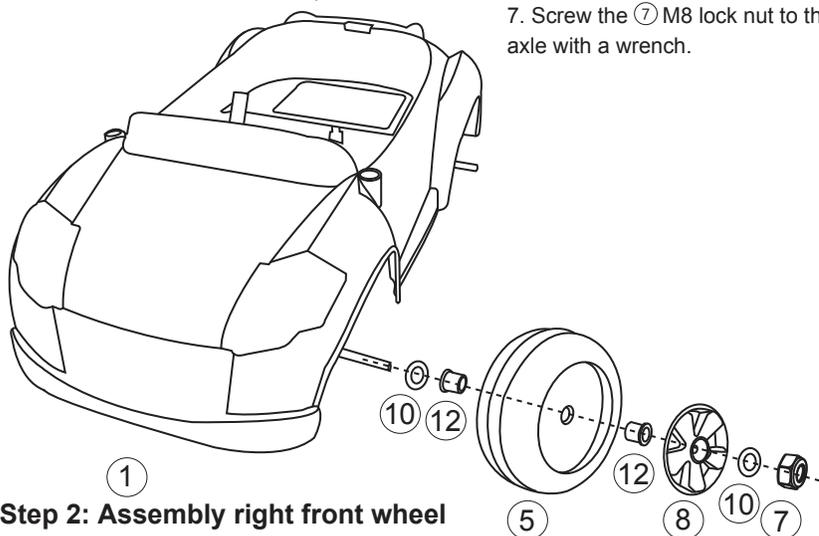


Step 2: Assembly right front wheel

1. Set the ⑩ 10MM gasket into the front axle;
2. Set the ⑫ inserts into the front axle in the direction as shown in the picture;
3. Set the ⑤ wheel into the front axle in the direction as shown in the picture;
4. Set the ⑫ inserts into the front axle in the direction as shown in the picture;
5. Set the ⑧ wheel hub into the front axle in the direction as shown in the picture;
6. Set the ⑩ 10MM gasket into the front axle;
7. Screw the ⑦ M8 lock nut to the front axle with a wrench.

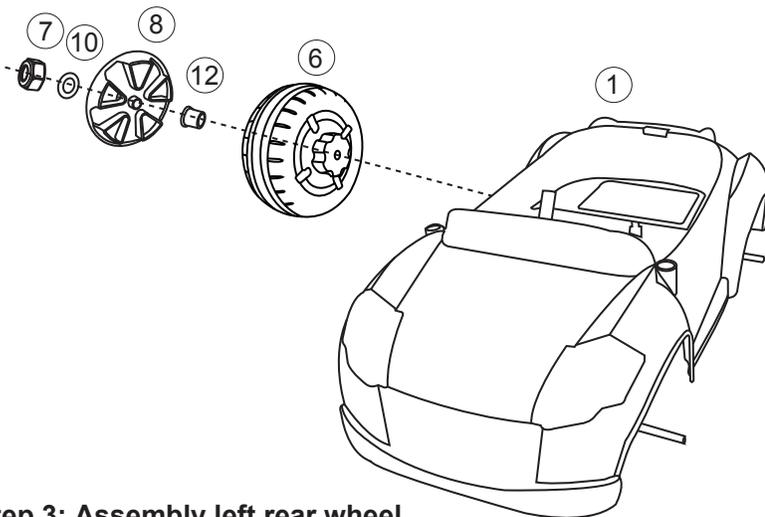


Step 3: Assembly left rear wheel

1. Set the ⑥ wheel into the rear axle in the direction as shown in the picture;
2. Set the ⑫ inserts into the rear axle in the direction as shown in the picture;
3. Set the ⑧ wheel hub into the rear axle in the direction as shown in the picture;
4. Set the ⑩ 10MM gasket into the rear axle;
5. Screw the ⑦ M8 lock nut to the rear axle with a wrench.

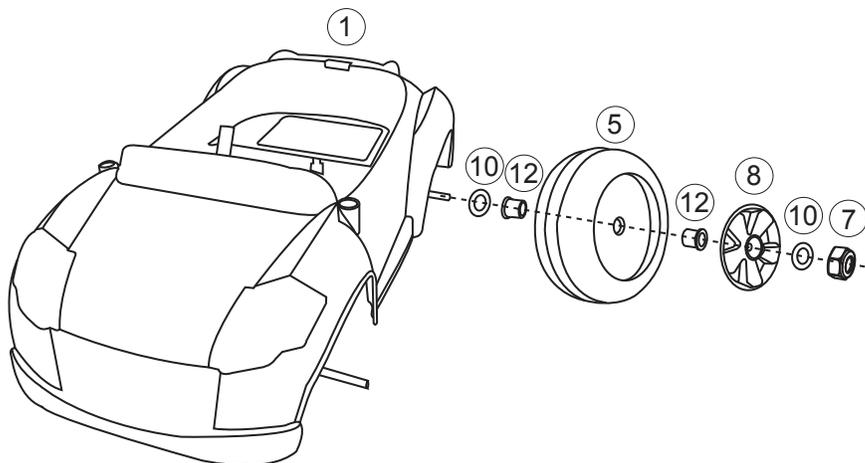


Step 4: Assembly right rear wheel

1. Set the ⑩ 10MM gasket into the front axle;
2. Set the ⑫ inserts into the front axle in the direction as shown in the picture;
3. Set the ⑤ wheel into the front axle in the direction as shown in the picture
4. Set the ⑫ inserts into the front axle in the direction as shown in the picture;
5. Set the ⑧ wheel hub into the front axle in the direction as shown in the picture;
6. Set the ⑩ 10MM gasket into the front axle;
7. Screw the ⑦ M8 lock nut to the front axle with a wrench.

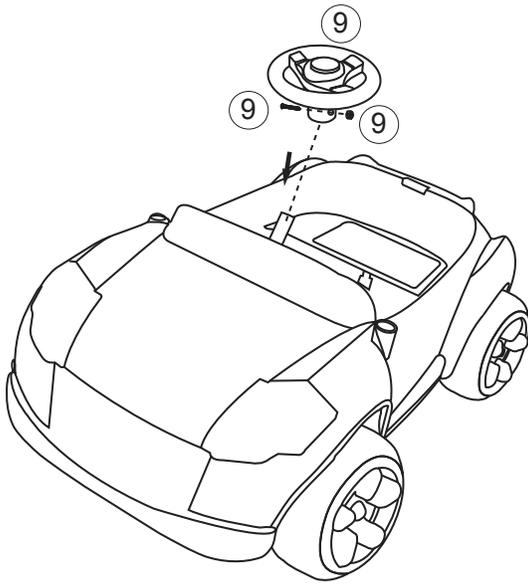


Step 5: Assembly left rear wheel

1. Remove the screws from the steering wheel first with a Phillips screwdriver;
2. Set the steering wheel into the direction lever, and align the screw holes on the steering wheel with those on the direction lever;
3. Install the screws previously removed from the steering wheel into the holes of the steering wheel and direction lever again, and lock them properly.

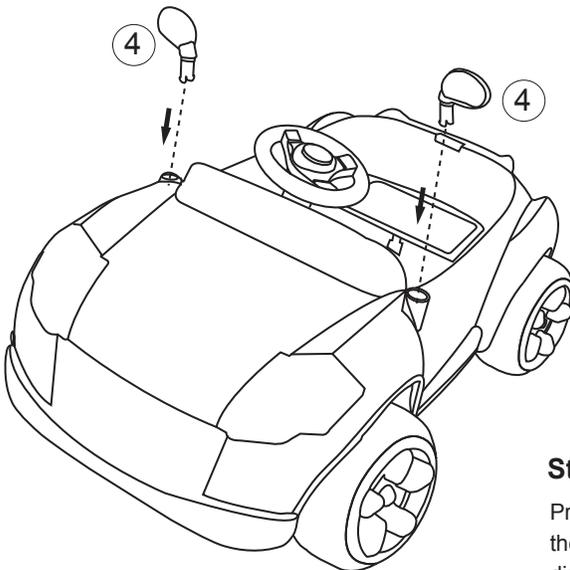


Step 6: Assembly mirror

Press down the reflector hard against the hole on the car body in the direction as shown in the picture.

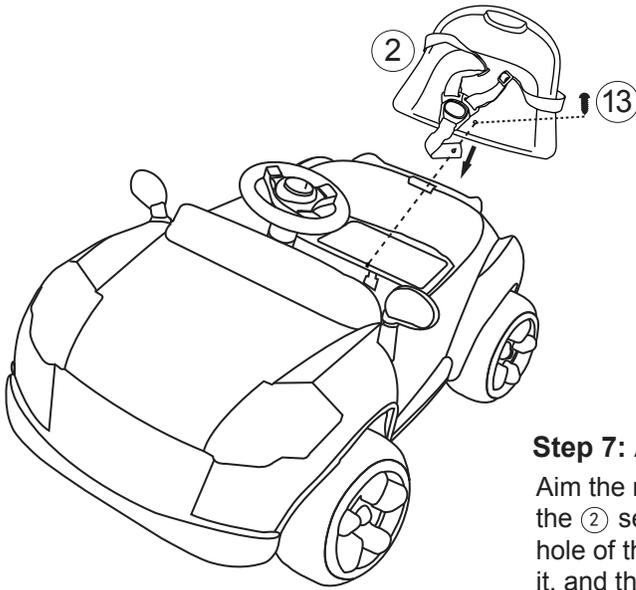




Step 7: Assembly seat

Aim the male tab at the back of the the ② seat cushion at the back end hole of the car body and insert it into it, and then fix it with a ⑬ 3x16 mushroom head tapping screw.

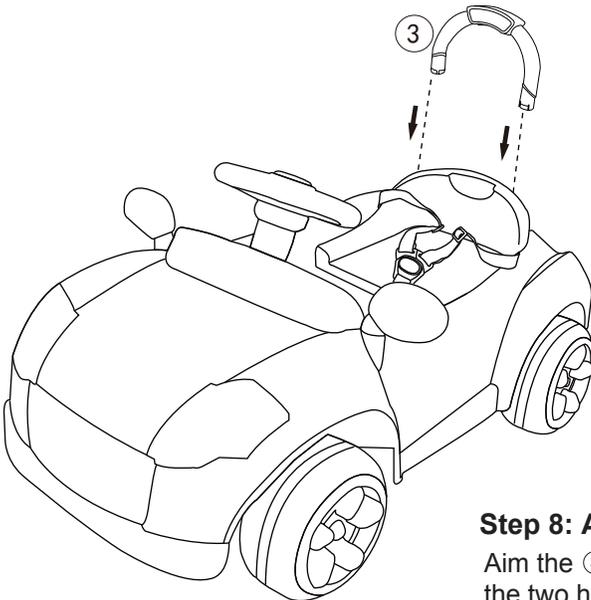

Step 8: Assembly tail



Aim the ③ rear empennage at the two holes in the rear of the car body and press it down hard.

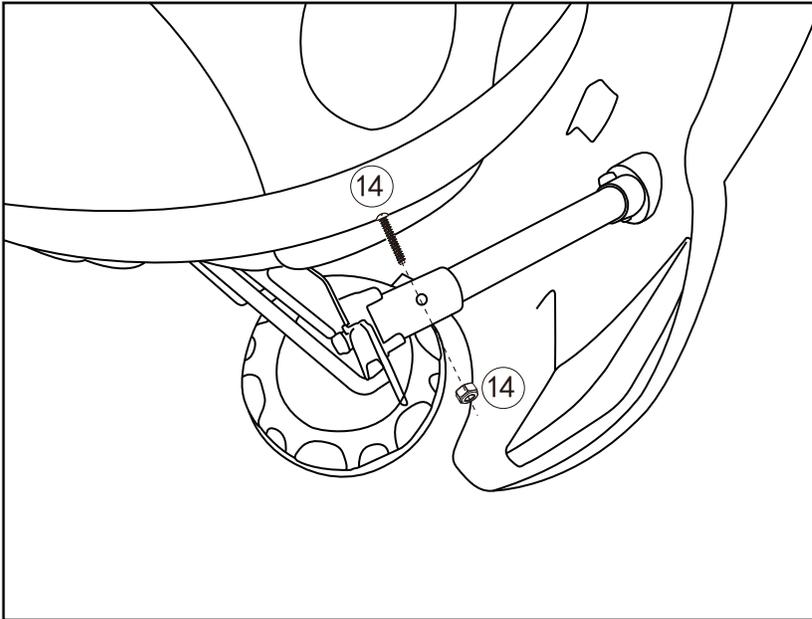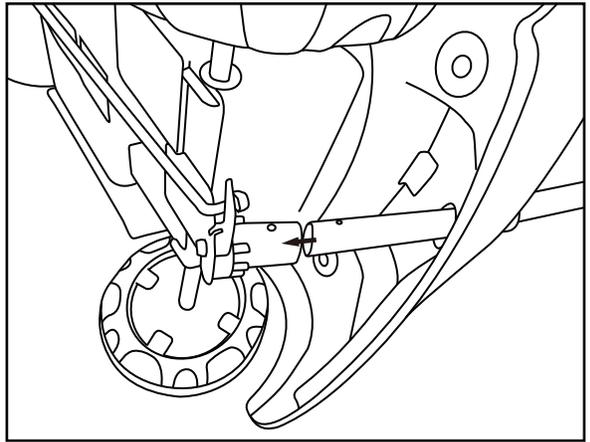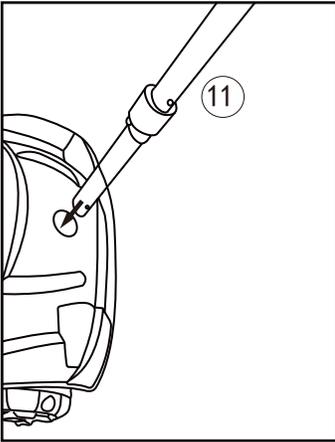


Step 9: Assembly handle

1. First aim the rear push stem at the hole in the middle of the rear of the car body and insert it into the hole;
2. Aim the push stem inserted into the car body at the steering base under the car body again;
3. Align the push stem holes inserted together with the direction steering base holes, and then pass the ⑭ M4x40 screws into the holes, and fix them tightly with ⑭ M4 lock nuts.

1. The handle bar can be up and down, adjust the length.

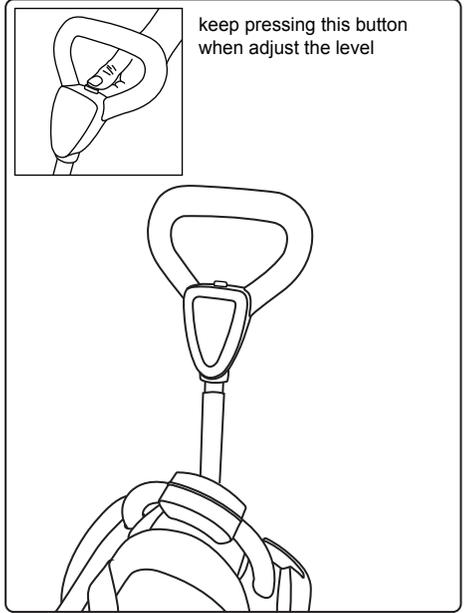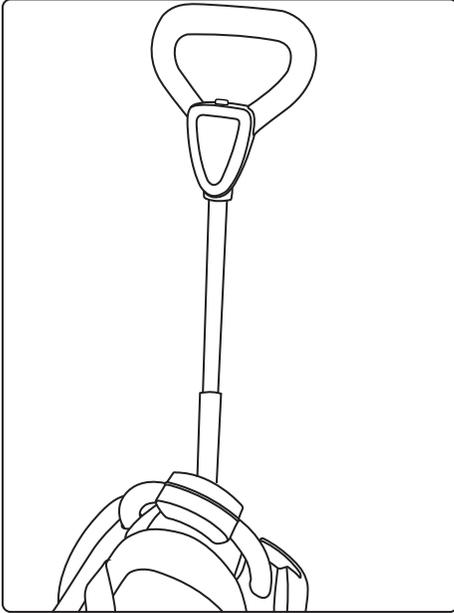


X. CHANGE TO PUSH / ELECTRIC MODE

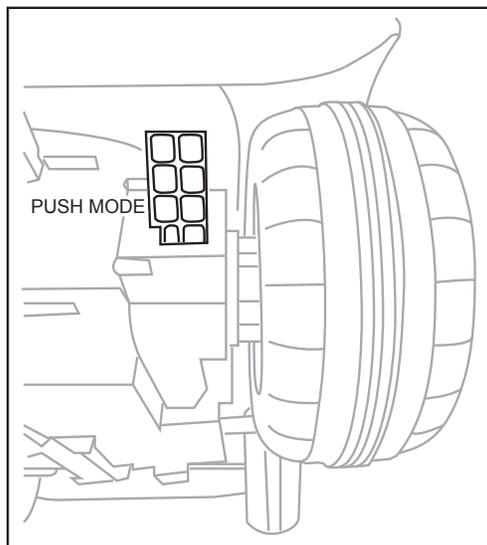

Note

By pushing the switch up, this car changes to Push Mode, in this mode, car can not run if your children hit the pedal switch. Please make sure the "ON-OFF" button is "OFF"

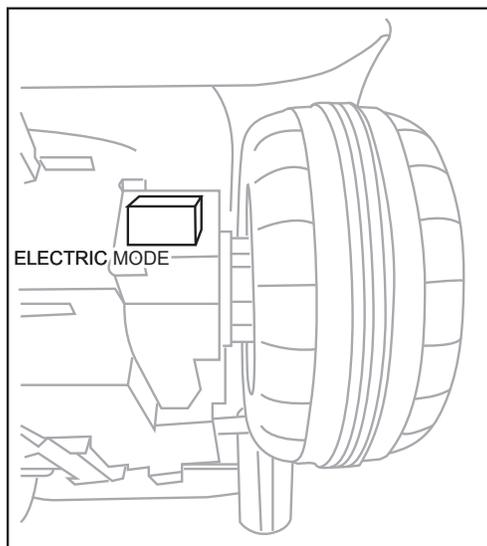


Note

By pushing the switch down, this changes the car into electric drive mode. The foot pedal and forward/reverse switch is now active. Please make sure the "ON-OFF" button is "ON"

XI . Charging

- (1). Like the below picture,put the charger into the vechile's charing hole.
- (2). Like the picture, The power plug into the matched stable AC power.

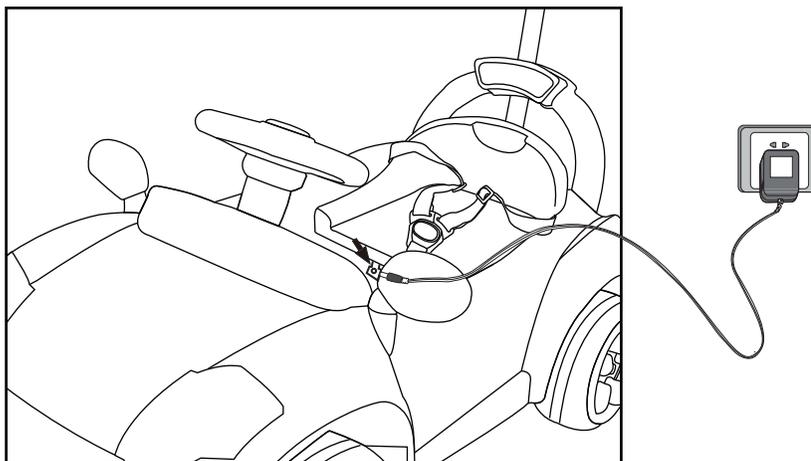

Attention when charging:

1. To assure the safety, Adults should do the battery charging,
2. First using , fully charged,need to charge another 8-12 hours.
3. Charge the battery if the vehicle runs slower, can charge 8-12 hours.But cannot charge over 16 hours.
4. Cannot open or decompose the battery and charger, should use the matched charger and battery.
5. When charging,cannot upside down the battery.
6. Before charging, check the charger ,battery and the plug is ok or not.If broken,no use. After repaired,then can use.
7. Charge the battery fully if you will store it for a long time, then charge it every 3 month, in this way you can extent the lifetime of the battery.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Where a failure does not amount to a major failure, we are entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by us to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (e.g. from your doctor), depending on the loss or damage.

In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period as stated on the packaging from the date of purchase.

In order to claim under this warranty, you will need to bring the product to the store of purchase, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product.

Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in any manner not recommended by the manufacturer or any neglect, misuse or excessive use.

The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.

HUNTER PRODUCTS

Level 2, 424 Warrigal Road Moorabbin 3189

Ph: 1800 224 094

Email: enquiries@hunterproducts.com.au