

MOTORIZED

MOTORIZED



MODEL JS007 QUAD SERVICE GUIDE

Please follow the directions in the attached service guide to check the connections on your ride on. Most times it is a loose plug or switch that causes electric ride's to stop working.

Keep in mind the ride will not operate if the power adaptor/charger cable is plugged into the ride, this is a safety feature to ensure a child does not take off while it's plugged in and damage it.

Disconnect the charger from the car before trying to operate it.


To rule out a faulty fuse:

1. Under the seat in the battery compartment please disconnect the short cable from the red terminal of the battery.
2. Then disconnect the long cable that comes from the ride on wiring to the fuse
3. Connect this cable directly to the red terminal of the battery.

So what you have left over is the small black fuse and a short cable attached to it that are not connected to the ride. This is bypassing the fuse, try this to see if it is in fact a faulty fuse.

If you have a ride on that is 18+ months old and after following these directions you cannot get it going we recommend removing the battery and having the battery & charger tested by a professional.


Batteryworld.com.au offer this service over the counter in your local outlet.

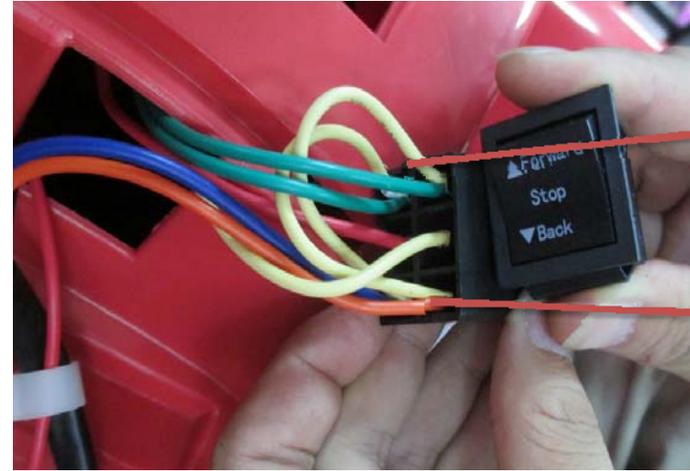


Forward wire

Back wire

1. How to check the forward-reverse switch and on-off switch
Use a flat head screwdriver to unlock the switch and check if the wire is connected.

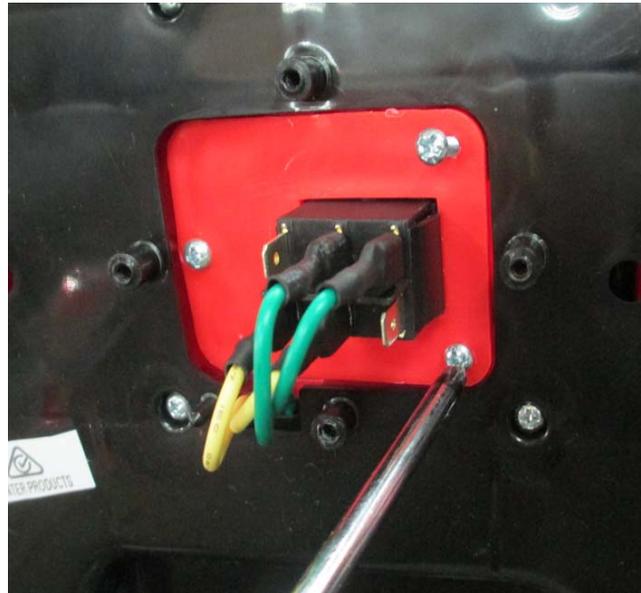

2. Check the pedal switch- Turn over the vehicle, then unlock the screws to check the connection of the pedal switch as per the above steps.

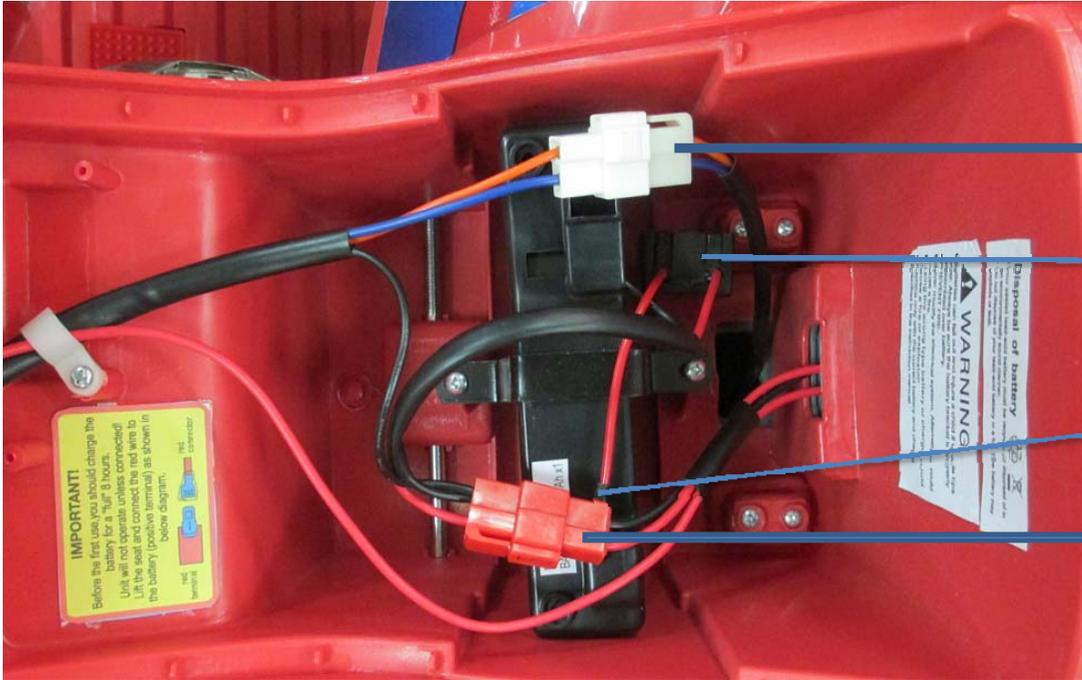


3. The internal wire of the vehicle after remove the seat

Pls make sure the plug of motor is connected firmly.

Auto-set fuse

Pls connect the red wire to the positive terminal of battery.

Pls check if the plug of battery is connected firmly as picture shown.

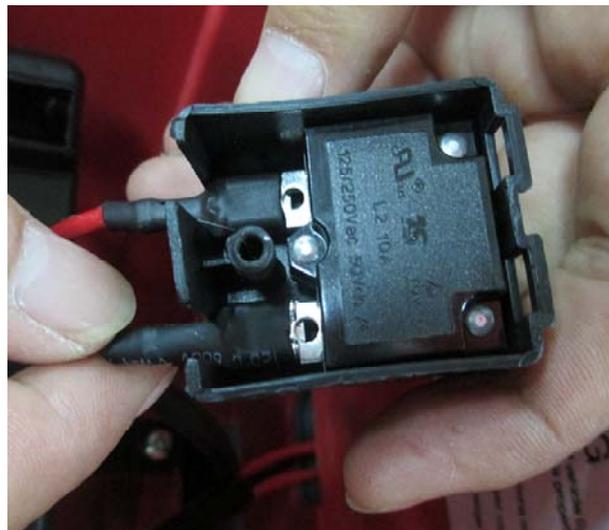

4. Check the connection of the auto-set fuse.



5. How to replace the gearbox

a. Unlock the nuts of the two sides for gear box.

b. Then pull out the bolt from the gear box.

c. Disassemble the driving wheel and rear wheel, then pull out the rear axle.

d. Open the seat to unlock the screws for connecting the gear box, disconnect the plug of the gear box, then pull out the whole gear box.

e. Unlock the screws of the gear box, and open the grey plastic box to get the motor.



