



Hunter
Products



6volt Easy Start Scooter Service Guide

Battery replacement

1. Screw off the battery cap




2. Take off the battery box cap



3. Screw off the bolt on the steer tube



4. Pull out the plug connecting to star bottom

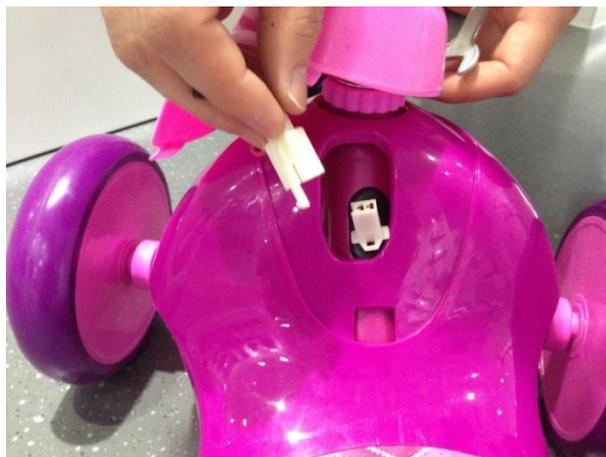

5. pull out the steering tube



6. Screw off the bolt on deck and take off the deck




7. Screw off the bolt in front



8. Pull out the plug to battery



9. push the battery and take out the battery for replacement.

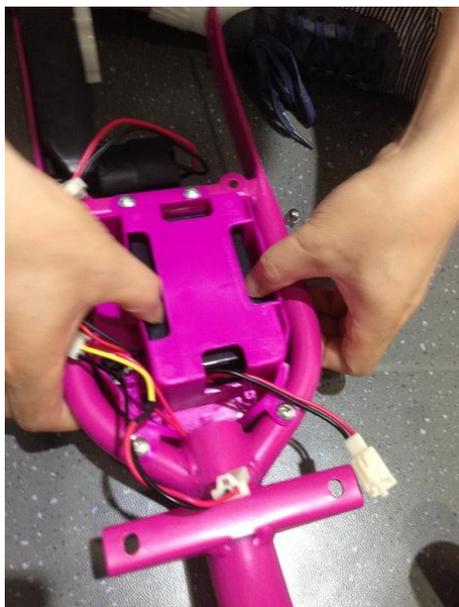

Controller replacement

1. Screw off the bolt on the steer tube



2. Pull out the plug connecting to star bottom



3. pull out the steering tube





4. Screw off the bolt on deck and take off the deck



5. Screw off the bolt in front



6. Pull out 3 plug on the controller

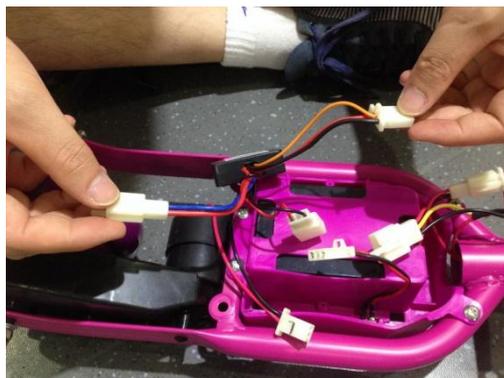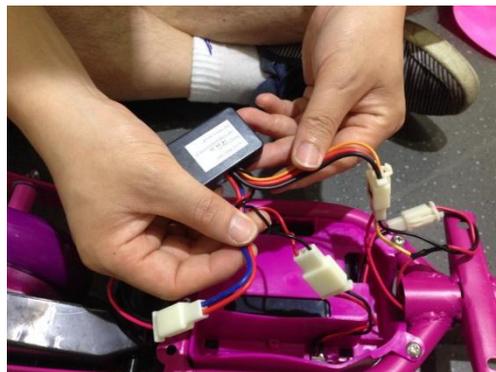

Start button replacement

1. Screw off the bolt on the steer tube




2. Pull out the plug connecting to star bottom




3. Pull out the steering tube



4. Pull out the plug

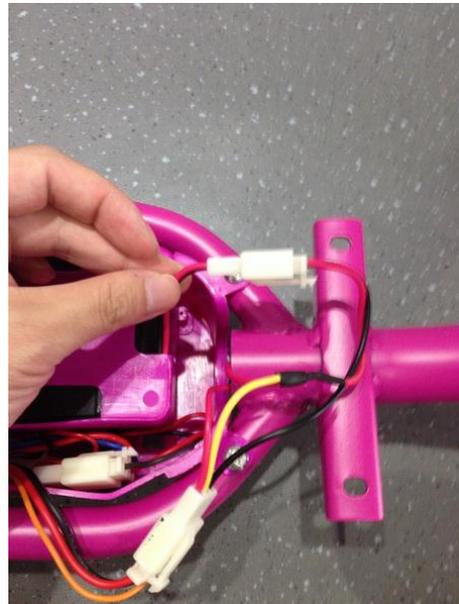

5. Cut off the plastic plug by scissors

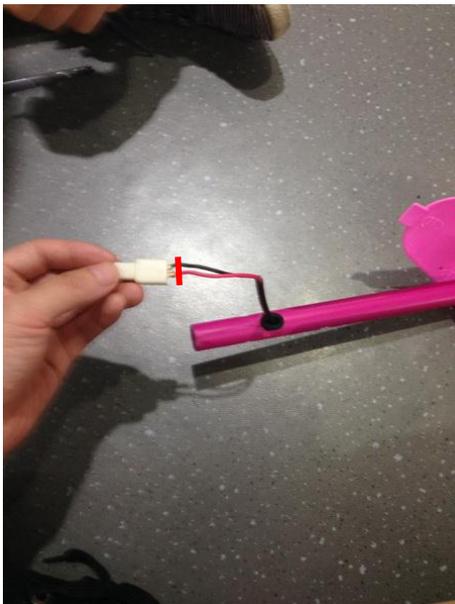

6. Screw off the start bottom




7. Pull out the grip




8. Pull out the wire from the tube



9. Through start bottom wire in the tube

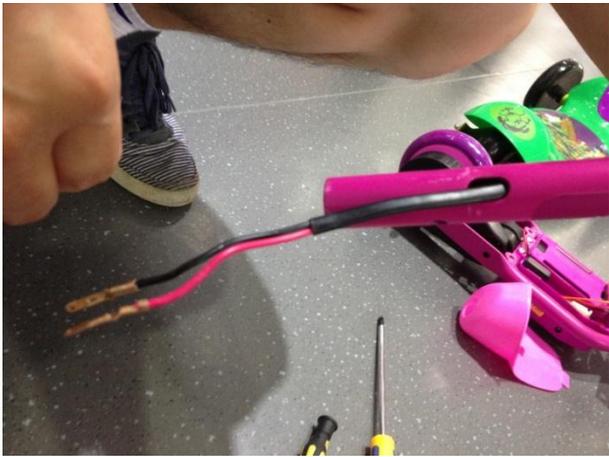

10. Assemble the white plug on the wire connecting after a sound of "click"

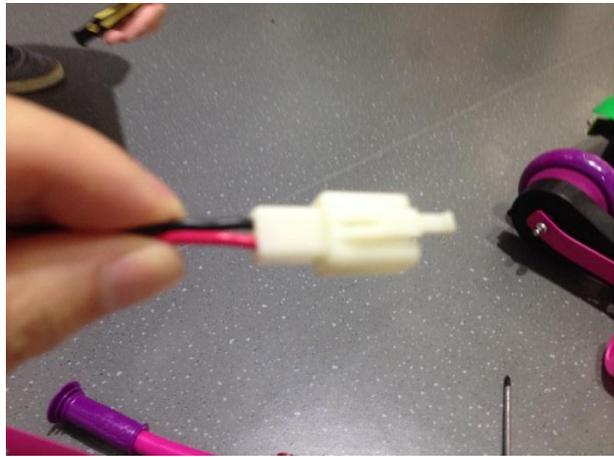

11. Connect the plug



Gear box replacement

1. Screw off the bolt on the steer tube



2. Pull out the plug connecting to star bottom



3. pull out the steering tube




4. Screw off the bolt on deck and take off the deck



5. Screw off the bolt in front



6. Pull out the motor connecting plug

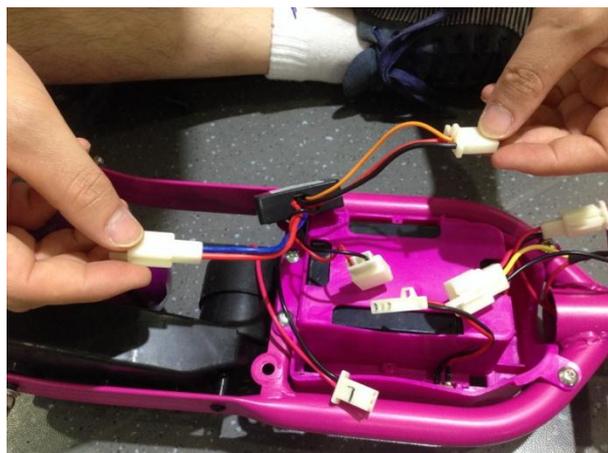

7. Screw off the nuts on each side of the rear wheel



8. Dis-assemble the rear wheel as photo



9. screw off the nut on the gear box



10. Take off the gear box.

